

What to do if...

What to do if...



A tire punctures

P. 382 If you have a flat tire



The engine does not start

P. 391 If the engine will not start

P. 72 Engine immobilizer system

P. 394 If the vehicle battery is discharged



The shift lever cannot be moved out

P. 392 If the shift lever cannot be shifted from P



The engine coolant temperature gauge enters the red zone

P. 400 If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 393 If you lose your keys



The battery runs out

P. 397 If the vehicle battery is discharged



The doors cannot be locked

P. 37 Doors



The horn begins to sound

P. 74 Alarm















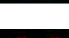

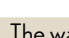

The vehicle is stuck in mud or sand

P. 402 If the vehicle becomes stuck

	The warning light or indicator light comes on	P. 360	If a warning light turns on or a warning buzzer sounds...
---	---	--------	---



nWarning lights

	Brake system warning light		Malfunction indicator lamp
or		or	
	P. 360		P. 361
	"ABS" warning light		Driver's seat belt reminder light
or		or	
	P. 361		Front passenger's seat belt reminder light
	Low fuel level warning light		Master warning light
	P. 362		P. 362
	SRS warning light		Electric power steering warning light
	P. 361		P. 361
	Open door warning light		Pre-collision system warning light
	P. 362		P. 361
	Charging system warning light		Low tire pressure warning light
	P. 361		P. 362

	The warning message is displayed	P. 369	If the warning message is displayed
---	----------------------------------	--------	-------------------------------------